

 
⚠ IMPORTANT ⚠
READ THE INSTRUCTIONS AND WARNINGS IN
THIS BOOK BEFORE USING THE FIREARM

INSTRUCTION BOOK

Model 300™

12 Gauge

Over & Under Shotgun



®

HOW TO ORDER PARTS AND SERVICE PAGE -- 19

CLEANING INSTRUCTIONS PAGE -- 15

HOW TO LOAD AND UNLOAD PAGE -- 12

IMPORTANT PARTS PAGE -- 5


RULES OF SAFE FIREARM HANDLING -- 2

MODEL 300™ OVER & UNDER SHOTGUN

Congratulations on your choice of a Remington firearm. With proper care, your shotgun should give you many years of dependable use and enjoyment.


⚠ This Instruction Book will assist you in learning how to safely use and properly care for your shotgun. Only when you understand and can safely practice all of the instructions and warnings in this book, should you use your shotgun with live ammunition. If you have any questions about the safe use of your shotgun, write to us at Remington Arms Company, Inc., Consumer Affair Division, Ilion, New York 13357-1888, or call us at our toll - free number, 1-800-243-9700. If you loan or sell this shotgun, this Instruction Book must accompany the firearm.

Picture 1

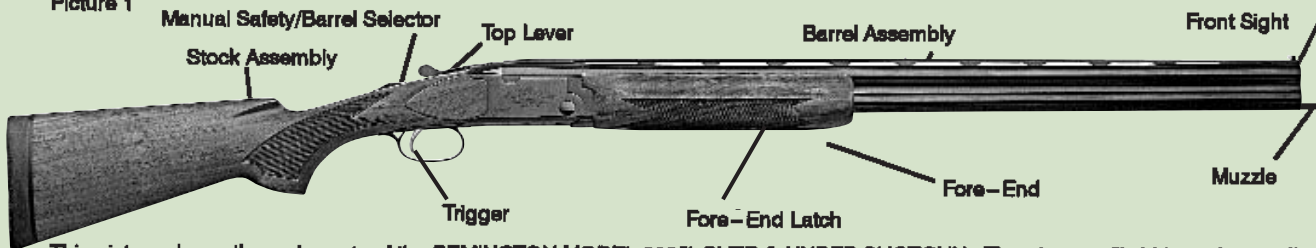

This picture shows the main parts of the REMINGTON MODEL 300™ OVER & UNDER SHOTGUN. The picture will aid in understanding the instructions in this book.

Picture 2
Ammunition

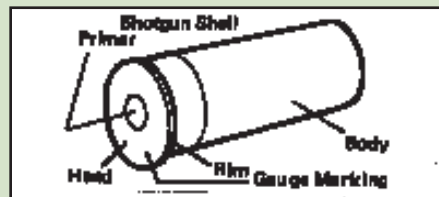

This picture shows the parts of the ammunition. For best results, we recommend that you use Remington ammunition - the ammunition used in factory testing your shotgun against our exacting function and performance standards.

RULES OF SAFE FIREARM HANDLING



READ UNDERSTAND AND PRACTICE THESE RULES OF SAFE FIREARM HANDLING. A person using a firearm has assumed enormous responsibility. You must use your firearm in a way that will ensure not only your own safety, but that of others as well. You must learn how to handle your firearm safely at all times. Failure to read, understand and obey these rules can result in serious personal injuries or death to you or others. Make safe firearms handling a habit – remember that only you can prevent firearms accidents.



The following firearms safety rules apply not only to your Remington Model 300 over & under shotgun, but to all firearms.



I. **CONTROL YOUR MUZZLE.** Always keep your muzzle pointed in a safe direction. A safe direction is one in which an accidental discharge will not cause injury to yourself or others. Never allow your firearm to point at anything you do not intend to shoot. Muzzle control is especially important when loading or unloading. Always know where your shotgun is pointed and keep control of the muzzle even if you stumble or fall.

II. **KNOW YOUR FIREARM.** Not all firearms are alike. No one should handle any firearm without first becoming totally familiar with the mechanical characteristics of the firearm, and with the safe handling procedures for loading, unloading, carrying, shooting and storing that firearm.

III. **TREAT EVERY FIREARM AS IF IT WERE LOADED.** Never assume a firearm is unloaded. Always check the chamber(s) and the magazine to make sure your firearm is completely unloaded. Even when you know or think your firearm is unloaded, always control the direction of the muzzle. When not in use, keep your firearm unloaded and the action open. When handling or carrying a loaded firearm, always keep the manual safety in the "SAFE" position until you are actually ready to shoot. Never rely on the manual safety to justify careless handling. Even if you think the safety is engaged, careless handling may result in an unintentional firing. The safety may not actually have been engaged; the internal mechanism may have been altered, disabled or broken; or the safety may have been disengaged by careless handling.



IV. **DON'T ALTER YOUR FIREARM.** Improper alterations or modifications to your firearm can be dangerous. NEVER alter, modify or change the safety, trigger, sear, hammers or other parts of the firearm. If you think your Remington firearm needs to be adjusted or modified, return it to the Remington factory or take it to a recommended Remington gunsmith.

RULES OF SAFE FIREARMS HANDLING



V. **WEAR EYE AND EAR PROTECTION.** Wear shatterproof eyeglasses, shooting glasses, or sunglasses and use ear protection, such as ear plugs or muffs whenever you are shooting. Exposure to shooting noise can cause permanent hearing loss. Wear protective eyewear to protect your eyes whenever you are shooting, cleaning, assembling or disassembling your firearm.



VI. **TAKE CARE OF YOUR FIREARM.** Keep your firearm's barrel(s) clean and free of obstructions. Firing a firearm with even a partially obstructed barrel can be extremely dangerous to you and those around you. If the firearm produces an abnormal sounding report or generates a weak recoil when you shoot, stop firing immediately and completely unload your firearm and check to be sure that no obstruction has become lodged in the barrel(s). Worn, broken, damaged or missing parts may be dangerous. Have your firearm checked periodically by a qualified gunsmith.



VII. **NEVER USE IMPROPER AMMUNITION.** Only use ammunition that exactly matches the caliber or gauge markings on your firearm. Careless or incorrect reloading is dangerous. Improperly-made reloads may cause the barrel or breech of any firearm to burst, which can result in serious personal injury or death to you or those near you. If your firearm misfires, i.e., fails to fire when you pull the trigger, then take the following precautions: (1) Point the muzzle in a safe direction; (2) Put the safe in the 'SAFE' position; (3) Carefully open the action avoiding exposure to your face; and (4) remove and discard the shell/cartridge safely. If your firearm experiences repeated misfires, take it to a qualified gunsmith or return it to the factory.

VIII. **LOAD AND SHOOT SAFELY.** Never load your firearm until you are in a safe location to shoot, and always keep the safety engaged until you are actually ready to shoot at a selected target. As soon as you cease firing, even temporarily, you should immediately engage the safety in the 'SAFE' position. Before you pull the trigger, make sure you can see the target clearly, and the path of the bullet, slug, or shot charge beyond the target. Never shoot at water, rocks, or any hard surface. Bullets may glance off such surfaces and cause injuries. Never shoot at noise or movement. Know the range of your firearm. Remember, shotgun pellets can travel 500 yards and shotgun slugs have a range of more than one-half mile. Rimfire bullets can travel more than 1 1/2 miles. Centerfire bullets can travel up to 5 miles.

RULES OF SAFE FIREARMS HANDLING



- IX. **UNLOAD YOUR FIREARM WHENEVER YOU ARE NOT SHOOTING.** Load your firearm only when you are in the field or on the target range ready to fire. Never carry or store a loaded firearm in a building or a vehicle. Never bring a loaded firearm into camp. Unload your firearm before crossing or climbing up or down any obstacle that may prevent you from keeping full control over the firearm, such as a fallen tree, fence, tree stand, or slippery area. Never pull a firearm towards yourself nor push it towards another person. Unload your firearm as soon as you are done shooting. Unloading your firearm means unloading it completely so there is no ammunition in the chamber(s) or in the magazine.



- X. **STORE YOUR FIREARM SAFELY.** Safe storage of firearms and ammunition is a must. Keep firearms and ammunition away from children and other unauthorized users. Lock unloaded firearms and ammunition securely in separate locations. Never leave an unsecured firearm or ammunition accessible to others.


⚠ SHOOT SOBER. Never drink alcohol beverages nor consume anything that can impair your judgment or physical coordination when you are using a firearm. Firearms and alcohol or drugs simply do not mix.

⚠ LEAD EXPOSURE WARNING: Discharging firearms in a poorly ventilated areas, cleaning firearms, handling ammunition may result in exposure to lead, a substance known to cause birth defects, reproductive harm, cancer and other serious physical injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.


IMPORTANT PARTS OF THE FIREARM

THE SAFETY

The manual safety on the Model 300™ is a tang safety located in the center of the top of the frame to the rear of the top lever. See Pictures 3 and 4.

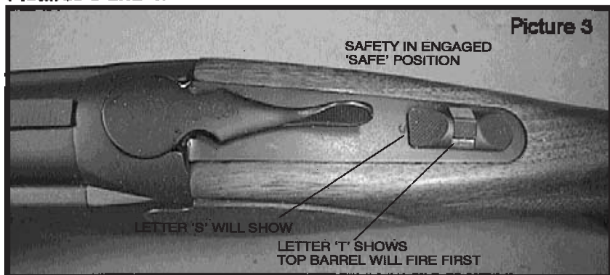

The safety also serves as the barrel selector. See page 5.

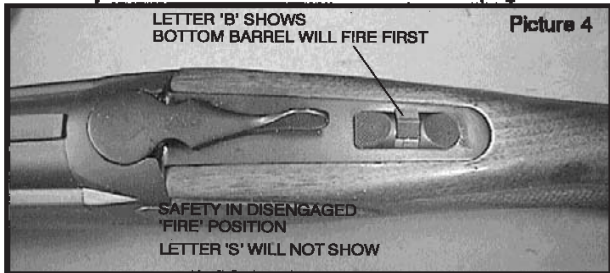

The safety provides additional protection against accidental or unintentional discharge under normal usage when properly engaged and in good working order.

To engage the safety in the 'SAFE' position, pull it rearward. The letter 'S' WILL SHOW. See Picture 3. Regardless of the position of the safety, treat every firearm as if it were loaded, and always point the muzzle in a safe direction.

Always put the safety in the 'SAFE' position before handling, loading or unloading the shotgun.

⚠ WARNING: Never pull the trigger when the safety is engaged in the 'SAFE' position.

⚠ WARNING: Do not touch the trigger while moving the safety.

When you are ready to fire the shotgun, push the safety forward so that the letter 'S' DOES NOT SHOW. The safety is now in the "FIRE" position. See Picture 4.

⚠ WARNING: The shotgun will fire when the trigger is pulled with the safety in the forward or 'FIRE' position.

⚠ WARNING: Immediately after firing the shotgun, put the safety back in the 'SAFE' position. The manual safety should always be in the 'SAFE' position except for when the shotgun is actually being fired. The safety should always be in the 'SAFE' position before you open the action to reload or unload. Once you have fired the shotgun, opening the action does NOT automatically put the safe in the 'SAFE' position. You must do this manually.

⚠ WARNING: Even though you may think the safety is engaged in the 'SAFE' position, remember that careless handling can cause the firearm to fire. See Rules of Safe Firearm Handling on Page 2.

THE BARREL SELECTOR

NOTE: Your Model 300 shotgun has two barrels and one trigger. A barrel selector is provided to allow you to select which barrel to fire first.

The barrel selector is positioned in the center of the safety. Moving the barrel selector right or left determines which barrel will fire first.

To select the top barrel to fire first, push the barrel selector to the right. This will expose the letter 'T'. See Picture 3.

To select the bottom barrel to fire first, push the barrel selector to the left. This will expose the letter 'B'. See Picture 4.

MODIFYING THE SAFETY

The practice of modifying any firearm safety mechanism to render it inoperable is not recommended. However, Remington recognizes that many competitive target shooters do this, as well as locking out the barrel selector to always fire a specific barrel first.

Should such modifications be desired for competitive target shooting, use the procedure described on Page 18.

⚠ WARNING: For your safety as well as those around you, anyone handling the modified firearm must be advised that the safety switch has been disabled.

THE TRIGGER

⚠ WARNING: DO NOT TOUCH THE TRIGGER UNTIL YOU ARE READY TO FIRE.



Pulling the trigger fires the shotgun.

After the first barrel has been fired, release to its full forward position and then pull the trigger again to fire the second barrel.

⚠ WARNING: Do not alter or modify the trigger or firing mechanism.

The weight of the trigger pull is preset at the factory to provide a safe and reliable trigger pull force.

All adjustments to the trigger, trigger pull and firing mechanism must be made only by the factory or a **REMINGTON RECOMMENDED GUNSMITH**.

CAUTION: Dry firing the Model 300™ with empty chambers is not recommended unless snap caps are used to cushion the firing pins to prevent damage to the firing pin holes. Excessive dry firing without snap caps could cause the firing pins to bind, resulting in misfires.


THE AUTOMATIC EJECTORS

The ejectors automatically eject any fired rounds from the barrels when the barrel assembly is broken open. Unfired rounds will not be ejected but will be lifted away from the breech face of the barrels when the action is opened. This will allow unfired shells to be easily removed by hand.

TO DISABLE THE AUTOMATIC EJECTORS SO THAT FIRED SHELLS MUST BE REMOVED MANUALLY:

Some shooters prefer that fired shells not be ejected automatically when the action is opened. To disable the automatic ejectors, do the following:

- 1 Remove the barrel assembly. See instructions on Page 13.

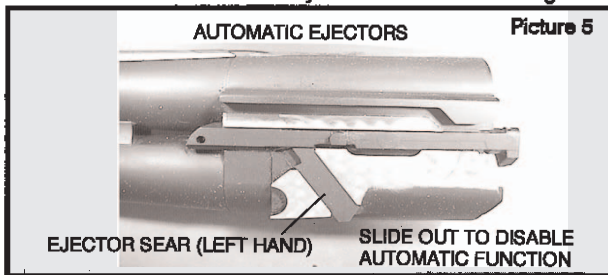

2. Slide out the left and right hand ejector sears and their detenting leaf springs. See Picture 5 and Exploded View Page 21.

CAUTION: The springs are located loosely in the rear of the ejector sears, and can be easily lost if not handled carefully.

For reinstallation, the ejector sear spring's 'dimple' must be facing the barrel assembly. See Picture 5.

WARNING: The ejectors are part of the shell case head support system. Never shoot the gun with either ejector not in place, as a shell head may rupture and cause serious personal injury.

THE TOP LEVER

The top lever is used to open the action.

WARNING: Beware of pinch points as you open and close the action.


TO OPEN (BREAK) THE ACTION:

WARNING: Whenever you open the action, keep the muzzle pointed in a safe direction and the safety in the 'SAFE' position.

1. Push the rear of the top lever to the right to unlock the action and allow the firearm to be opened. See Picture 6.
2. Rotate the barrel assembly downward to open (break) the action.

WARNING: When the action is closed, the firearm can be fired.

Picture 6

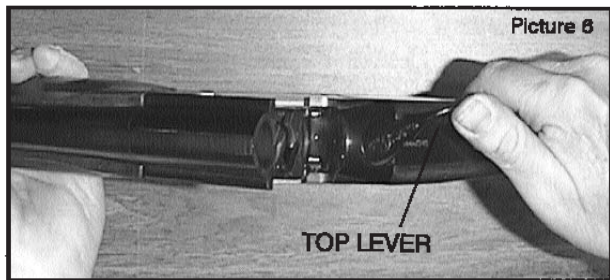

THE BARRELS

⚠ WARNING: The inside of both barrels must be clean and free of obstructions.

I. TO CHECK THE INSIDE OF THE BARRELS:

1. Point the muzzle of the shotgun in a safe direction.
2. Engage the safety in the 'SAFE' position so the letter 'S' SHOWS.
3. Push the rear of the top lever to the right.
4. Rotate the barrel assembly down to open (break) the action. Beware of pinch points.
5. Look through both barrels from the breech end to make sure there are no obstructions in them.

II. TO REMOVE AN OBJECT FROM INSIDE A BARREL:

⚠ WARNING: NEVER try to remove an object from a barrel by loading another shell and firing. This may cause the barrel to burst

or a shell case to rupture, and cause serious personal injury or death to you and those around you.

1. Remove the barrel assembly following the instructions shown on Page 13.
2. Use the correct cleaning rod.
3. Insert cleaning rod into the muzzle and lightly tap rod to free objects.
4. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the Remington factory or a REMINGTON RECOMMENDED GUNSMITH.

III. TO CLEAN THE BARRELS AND CHOKE TUBES FOLLOW THE INSTRUCTIONS SHOWN ON PAGE 15.

BEFORE LOADING THE SHOTGUN

⚠ WARNING: Make sure that the inside of both barrels is free of dirt or other objects.

THE CHOKE TUBES

Your Model 300 over & under shotgun is equipped with Rem.™ Choke tubes to allow you to utilize the specific type of choke constriction desired for specific types of hunting or target shooting. A choke tube wrench has also been supplied to be used when changing or tightening the choke tubes.

⚠ WARNING: NEVER place your hand over the muzzle when changing the choke tubes.

TO CHANGE THE CHOKE TUBES:

1. Point the shotgun in a safe direction.
2. Pull the safety to the 'SAFE' position so the letter 'S' SHOWS.
3. Open the action and check the chambers to make sure there are no shells in either barrel.
4. Place the choke tube wrench into the choke tube.
5. Turn the wrench counter-clockwise and remove the choke tube.
6. Select the desired choke tube and insert the tube into the barrel.
7. Tighten the choke tube snugly but **DO NOT OVERTIGHTEN**.
8. Close the action.
9. Following the above procedure, check the choke tubes occasionally to make sure they have not loosened.

⚠ WARNING: NEVER fire the firearm without the choke tubes installed.


⚠ WARNING: NEVER alter a barrel by overboring or lengthening the forcing cone. This may cause the barrel to burst, and cause serious personal injury or death to you and those around you.

THE FORE-END ADJUSTING SCREW

The fore-end adjusting screw is used to adjust the tightness of the fore-end iron against its matching radius of the frame. See Picture 10 on Page 11. Any looseness of the fore-end iron might prevent the hammers from being recocked, or might result in a loose barrel assembly when the gun is broken open.


TO ADJUST TIGHTNESS OF FORE-END IRON

1. Remove the fore-end assembly. See Page 13.
2. Using the 3/32" hex key provided, insert it into the hole in the front of the barrel lug. See Picture 7. Rotate it until it finds the corresponding hex hole in the end of the fore-end adjusting screw.

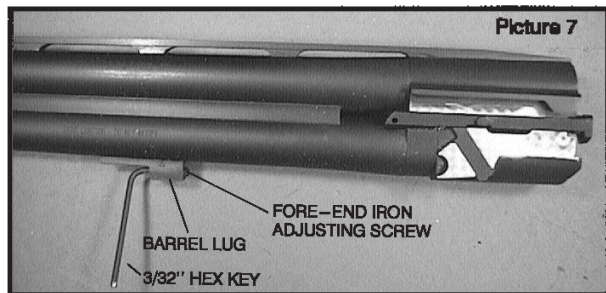

3. To increase tightness, rotate the key a fraction of a turn counterclockwise when viewed from breech end of firearm.
4. Remove the hex key and replace the fore-end assembly. Make sure that the fore-end latch closes easily. Check the tightness by breaking gun open.
5. Repeat procedure until satisfactory tightness is obtained.

HOW TO ASSEMBLE

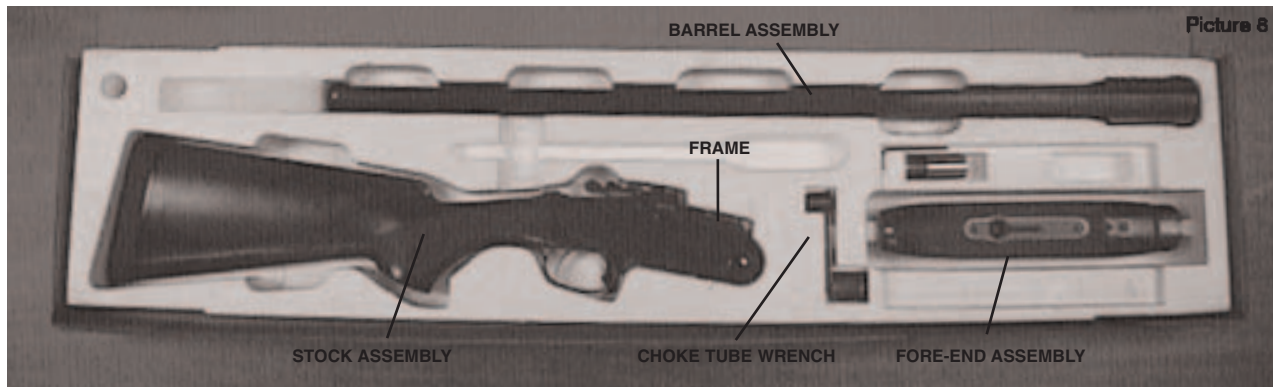

⚠ WARNING: Always wear eye protection when assembling or disassembling the firearm to prevent injuries caused by compressed springs and other parts.


The Model 300™ Shotgun is shipped with the barrel and fore-end assemblies removed. See Picture 8 for location of parts.

1. Before assembling, clean the barrel assembly following the instructions on Page 15.
2. Push the rear of the top lever to the right until it latches open. See Picture 6.
3. Align the circular cuts on the underside of the barrel assem-


by with the pivot pins in the front of the frame. See Picture 9.

4. Hold the barrel assembly in engagement with the pivot pins and align the ejector cam pins with their cam slots in the frame. Then rotate the barrel assembly until the top lever latches into place in the center of the frame top tang.
5. Carefully place the fore-end assembly at a slight angle to the barrel, and fit radius of the fore-end iron to the matching radius of the frame. See Picture 10.
6. Push the fore-end assembly against the bottom of the barrel to latch into place.

Picture 9

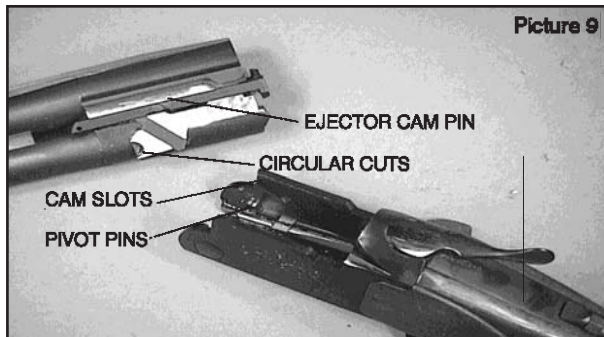

Picture 10

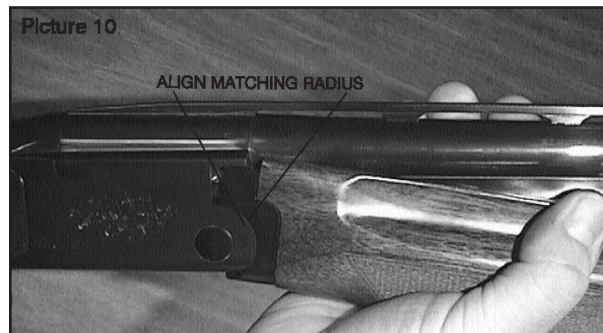

FULLY ASSEMBLED MODEL 300™ OVER & UNDER SHOTGUN




HOW TO LOAD AND UNLOAD

I. TO LOAD THE SHOTGUN:

⚠ WARNING: Do not load your shotgun until you are in the field or at the target range and ready to shoot. NEVER load your shotgun in a dwelling, building, vehicle or camp. NEVER leave your loaded shotgun unattended – even momentarily.

1. Point the shotgun in a safe direction.
2. Pull the safety to the 'SAFE' position so the letter 'S' SHOWS.
3. Push the rear of the top lever to the right to unlock the action.
4. Rotate the barrel assembly downward to open (break) the action. Beware of pinch points.
5. Place a shell of the correct gauge and length into one or both of the barrel chambers. See Picture 11. If only one barrel is to be loaded, check to make sure the barrel selector is positioned to fire that barrel first.

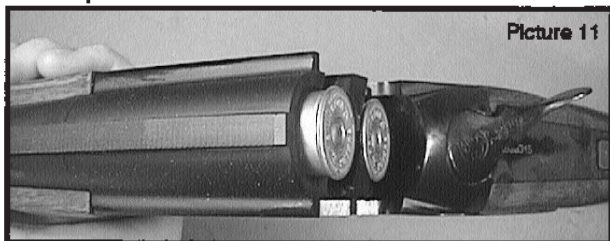

⚠ WARNING: Always check the shell for the correct gauge and length before loading the shotgun. See Rules of Safe Firearm Handling on Page 2.

6. While still controlling the direction of the muzzle, rotate the barrel assembly upward to close and lock the action. Make sure that the top lever has returned to its central position on the frame top tang.

⚠ WARNING: THE SHOTGUN IS NOW LOADED.

II. TO FIRE THE SHOTGUN:

⚠ WARNING: Whenever you intend to fire your shotgun, know your target and shoot safely. See Safety Rules on Page 2.

1. To fire the shotgun, move the safety forward so that the letter 'S' is completely covered by the safety. The safety is now in the 'FIRE' position.

⚠ WARNING: THE SHOTGUN IS NOW READY TO FIRE.

2. Pull the trigger to fire the shotgun.

III. TO UNLOAD THE SHOTGUN:

⚠ WARNING: Unload your shotgun whenever you are not shooting. See Rules of Safe Firearm Handling on Page 2.

1. Point the shotgun in a safe direction.
2. Put the safety in the 'SAFE' position so the letter 'S' SHOWS.
3. Push the rear of the top lever to the right and open the action.

⚠ WARNING: The Model 300™ Shotgun has automatic ejectors. While still controlling the direction of the muzzle, position the chambers to eject the fired shells in a direction away from your face.

4. Any fired shell will be automatically ejected from the shotgun when the action is fully opened. See Picture 12.



5. An unfired shell will be partially extracted from the chamber and may be removed by hand.

⚠ WARNING: Always check the chambers to make sure there are no shells in the shotgun.

⚠ WARNING: Make sure that both barrels are free of obstructions.


HOW TO DISASSEMBLE

⚠ WARNING: Before any disassembly, make sure the shotgun completely is unloaded.

⚠ WARNING: Whenever you disassemble your shotgun, wear eye protection to guard against injury caused by compressed springs or other components of the shotgun.

TO DISASSEMBLE:

1. Point the shotgun in a safe direction.
2. Pull the safety in the 'SAFE' position so the letter 'S' SHOWS.
3. Open the action and make sure there are no shells in the shotgun.
4. Close the action.
5. Lift the fore-end latch. See Picture 13.

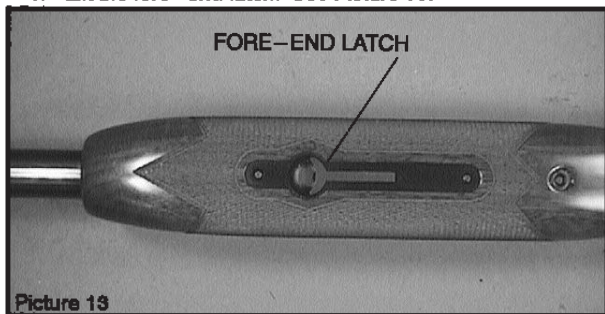

6. Pull the front of the fore-end assembly away from the barrel slightly.
7. Move the fore-end forward towards the muzzle and remove the fore-end assembly from the shotgun.
8. Push the rear of the top lever to the right to unlock the action.
9. Rotate the barrel assembly downward as far as possible to open the action.
10. Move the barrel assembly up and rearward to disengage the barrel assembly from the pivot pins in the frame. See Picture 14.




TO REMOVE THE STOCK ASSEMBLY:

1. Use a hard blunt object to depress the top lever detent to unlatch the top lever. See Picture 15.
2. Use a phillips head screwdriver to loosen the top recoil pad screw, then unscrew the lower recoil pad screw and rotate the recoil pad to expose the stock bolt hole.

NOTE: Apply a small amount of liquid soap or oil to the screwdriver for ease of insertion and to prevent damage to the recoil pad.

3. Insert a 7/16" socket into the stock bolt hole.
4. Unscrew the stock bolt until the stock can be pulled from the frame. See Exploded View on Page 21.

CAUTION: Except as described in this instruction book, your Model 300™ Shotgun should only be disassembled by a Remington Recommended Gunsmith.

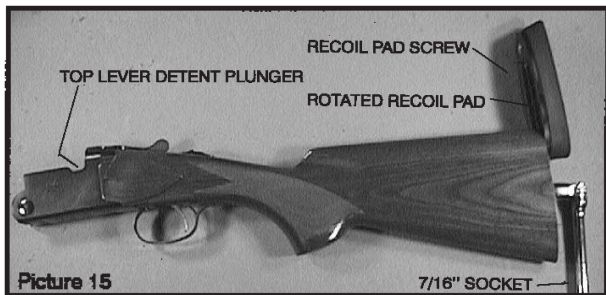


LUBRICATION AND MAINTENANCE

⚠ WARNING: NEVER lubricate or clean your shotgun unless it is completely unloaded.

TO CLEAN THE BARREL ASSEMBLY:

1. Use the instructions and equipment provided in a good cleaning kit. For cleaning kit recommendations, see your Remington Recommended Gunsmith.
2. Select the correct gauge cleaning brush and attach the brush to the cleaning rod.
3. Put the cleaning brush into the cleaning solvent.
4. Push the cleaning rod through each barrel from the breech end several times.
5. Push the correct size cleaning patch through each bore.
6. Repeat several times using a clean patch each time until the patch is not dirty.
7. Remove all shooting residue from the locking lugs, ejectors and ejector sears. See Picture 16.

⚠ WARNING: After cleaning, always make sure that both barrels are free of obstructions.

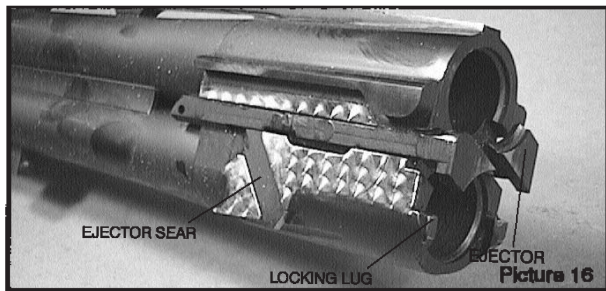


TO CLEAN THE CHOKE TUBE:

1. Remove the choke tube from the barrel. See instructions on Page 9.
2. Clean the choke tube including the threads with gun cleaning solvent and wipe dry.
3. Apply Rem.™ Oil on threads and reassemble choke tube to the barrel following instructions on Page 9.

TO CLEAN THE FRAME

TO CLEAN THE FRONT OF THE FRAME:

1. Brush the inside of the front of the frame with cleaning solvent and wipe dry. See Picture 17.
2. Lightly grease the two pivot pins, the ejector cam slots, the inside walls where contact is made with the barrel assembly, and the front radius of the frame where it matches the fore-end iron. Use a good extreme pressure grease.

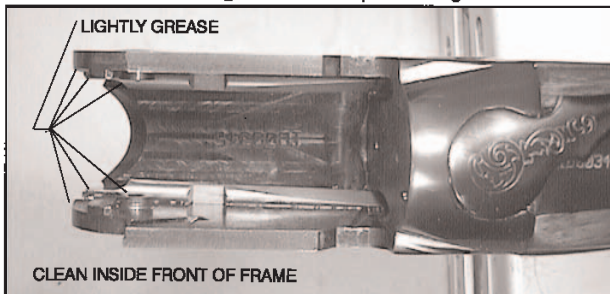


TO CLEAN THE REAR OF THE FRAME:

⚠ WARNING: The hammers are under extreme spring pressure. Pulling the trigger or moving any part of the trigger assembly can cause a hammer to be released, which may cause personal injury. Make sure that the safety is in the engaged 'SAFE' position with the letter 'S' SHOWING.

1. Liberally spray the trigger, safety, locking bolt and top lever mechanisms with Rem™ Oil and let it stand for 15 minutes. See Picture 18.
2. Spray again to wash off components and shake off excess lubricant.


⚠ WARNING: Excessive use of a non-recommended lubricants could adversely affect the function and safe operation of firearms. Failure to properly maintain your firearm can expose you and others to unnecessary risk of personal injury or death.

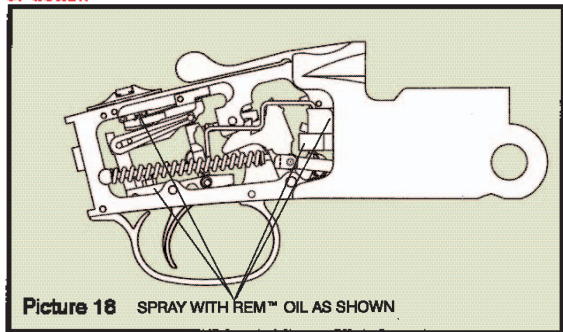

Picture 18 SPRAY WITH REM™ OIL AS SHOWN

TO CLEAN THE FORE-END IRON:

1. Brush the rear of the fore-end iron with cleaning solvent and wipe dry. See Picture 19.
2. Lightly grease the hammer cocking rod cam surfaces and the radius where the fore-end iron matches the frame. Use a good extreme pressure lubricant.

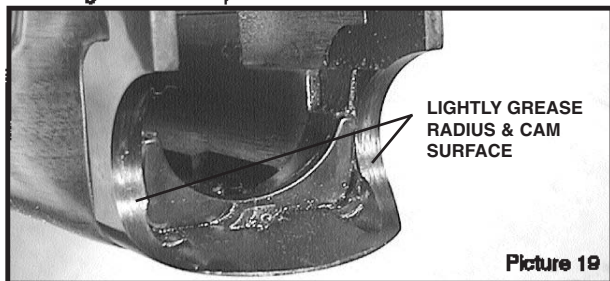

TO REASSEMBLE THE FIREARM:

1. Replace the stock by reversing the disassembly procedure described on Page 14.
2. Reassemble the rest of the firearm following the instructions shown on Page 10.

⚠ WARNING: Your shotgun should be checked and inspected periodically by the Remington Arms Company, Inc. or a **REMINGTON RECOMMENDED GUNSMITH**. This will help insure proper functioning of your shotgun and aid in detecting any necessary replacement of worn or damaged parts. See Rules of Safe Firearm Handling on Page 2.

LUBRICATION:

Over-lubrication should be avoided at all times, a thin coat of Rem™ Oil helps to prevent the possibility of rusting. See note below.

When the shotgun is to be stored, it should be carefully cleaned and thoroughly oiled. Outside surfaces should be wiped with a light coat of Rem™ Oil occasionally.

When your shotgun is to be reused, all excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington Rem™ Oil is available from your local dealer. If your dealer is out of stock, ask him to order Rem™ Oil from his Remington distributor.

SAFETY MODIFICATION

Your Model 300™ Over & Under Shotgun has been designed and built with the understanding that some owners will modify their safety mechanisms for competitive target shooting. See Page 6.

Locking the safety in the 'FIRE' position should only be done by, or for, a professional target shooter with many years of safe gun handling practice behind him/her.

⚠ WARNING: For your safety, as well as those around you, anyone handling such a modified firearm must be advised that the safety has been disabled.

Read the following instructions completely before you make these modifications. If these instructions are unclear to you, or you hesitate to undertake these steps yourself, take these instructions and your firearm to a competent gunsmith.

TO LOCK THE SAFETY IN THE DISENGAGED 'FIRE' POSITION.

⚠ WARNING: This modification will prevent the safety from going to the engaged 'SAFE' position. For your safety, as well as those around you, anyone handling such a modified firearm must be advised that the safety has been disabled.

1. Follow safety procedures and disassemble the fore-end, barrel assembly, and the stock from the frame. See Pages 13 and 14.


⚠ WARNING: The hammers, which are under extreme pressure, will now be exposed. Pulling the trigger or moving any part of the trigger assembly can cause a hammer to be released, which

may cause serious personal injury.

2. Locate the safety stop pin, which is in its rear hole in the frame, and drive it out towards the left side of the frame. See Picture 20.
3. Move the safety to the 'FIRE' position.
4. From the left side of the frame, reposition the safety stop pin, small diameter first, into its front hole, and drive it in until it is flush with the side of the frame. See Picture 20.
5. Check the motion of the safety to verify that it will not move from the disengaged 'FIRE' position.
6. Reassemble the firearm. See Pages 10 and 17.

TO RESTORE NORMAL OPERATION:

The safety can be unlocked, by replacing the safety stop pin back into its rear hole in the frame. See Picture 20.

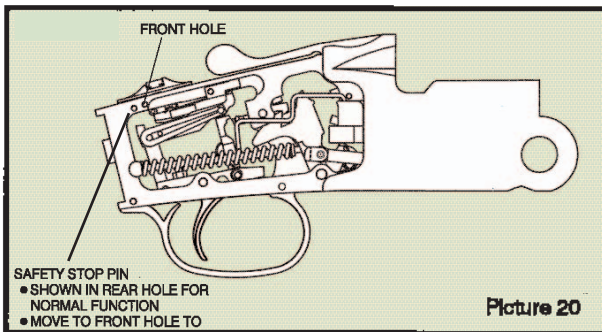

TO ORDER PARTS:

NOTE: Many Remington Dealers or Service Centers carry a full line of parts. Please check with them before ordering.

TO ORDER:

1. CALL OUR TOLL FREE NUMBER: 1-800-243-9700
 - A Please have your firearm model and serial number ready, in addition to the quantity, item number in the parts listing and parts description.
 - B Please have your Visa, Mastercard, Amex, or Discover Card ready. If you wish to pre-pay by check or money order, an exact quote will be given to you over the phone. (Sorry, no COD's); or
2. Fax your order to: 336-548-7801. Include all of the information in 1A & 1B above, in addition to your Name, Address (with zip) and complete telephone number.

⚠ WARNING: USE ONLY REMINGTON PARTS IN REMINGTON FIREARMS.

NOTE: SOME PARTS MAY BE RESTRICTED.
See parts list for details.

INSTRUCTION BOOKS AND GUNSMITH LIST:

To get an instruction book for any Remington firearm, or a list of recommended gunsmiths, call 1-800-243-9700.


TO EXPEDITE SERVICE AND PARTS:

- An Authorized Gunsmith list is provided for your use. Please contact your Authorized Service Center, for evaluation of your firearm, as this may provide you with the most timely service and repairs.
- If your local Remington Gunsmith cannot provide the service or repairs and you need further assistance, please call our toll free number 1-800-243-9700, then press or say "1". Then, if shipment of your firearm to Remington is required, Please:
 1. Enclose in the firearm box the model name or number of your firearm, and a note fully describing the problem. Include your full name and address (including zip code) day time telephone number, the model and serial number of your firearm.
 2. Please send your INSURED firearm by either United Parcel Service (UPS) or Parcel Post (US Post Office).
 3. Be sure to record the serial number of your firearm before sending it to us.
 4. **PROOF OF PURCHASE** may be required on recently manufactured firearms.

⚠ WARNING: DO NOT SEND LIVE OR SPENT SHELLS IN YOUR FIREARM OR IN THE SAME BOX WITH THE FIREARM. THIS IS A VIOLATION OF FEDERAL LAW. IF YOU FEEL YOU MUST SEND SPENT SHELLS PLEASE SEND THEM IN A SEPARATE PACKAGE AND INCLUDE NAME, ADDRESS (WITH ZIP CODE), TELEPHONE AND MODEL AND SERIAL NUMBER OF YOUR FIREARM.


MODEL 300™

OVER & UNDER SHOTGUN

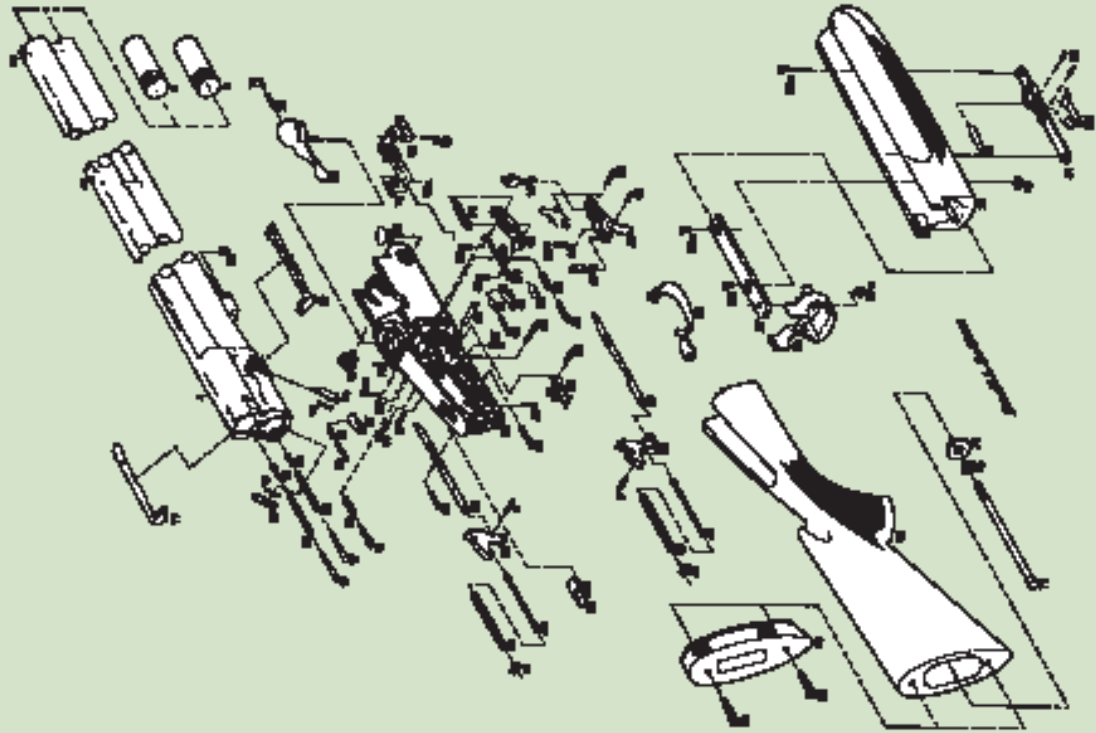

View No.	Part Name	View No.	Part Name
	NOTE: Field Grade listed below.	02	Frame (Restricted)
4	Barrel Assembly (Restricted)	33	Front Sight
8	Choke Tube - Gun Accessories	34	Hammer - Left
9	Cocking Rod Retaining Pin (2)	35	Hammer - Right
10	Connector	36	Hammer Cocking Rod - Left
10a	Disconnecter Rod (Restricted)	37	Hammer Cocking Rod - Right
11	Ejector - Left (Restricted)	38	Hammer Pivot Pin
12	Ejector - Right (Restricted)	39	Hammer Spring (2)
13	Ejector Beak - Left (Restricted)	40	Hammer Spring Plunger (2)
14	Ejector Beak - Right (Restricted)	41	Hammer Spring Plunger Pivot (2)
15	Ejector Beak Spring (2)	42	Locking Bolt (Restricted)
16	Ejector Spring (2)	43	Locking Bolt Spring
17	Ejector Spring Plunger (2)	44	Locking Bolt Spring Pivot
18	Ejector Spring Retainer (2)	45	Middle Sight
19	Escutcheon	46	Pivot Pin (2)
20	Escutcheon Screw	47	Rear Connector Link
21	Firing Pin (2)	48	Rear Connector Link Pin
22	Firing Pin Retaining Pin (2)	49	Recoil Pad
23	Firing Pin Spring (2)	50	Recoil Pad Screw (2)
24	Fore-End (Field)	51	Safety/Barrel Selector Assembly
25	Fore-End Adjusting Screw	52	Safety Detent Spring
26	Fore-End Iron (Restricted)	53	Safety Spring Retaining Pin
27	Fore-End Iron Beam	54	Safety Stop Pin
27a	Fore-End Iron Beam Screw	57	Sear - Left
28	Fore-End Latch	58	Sear - Right
29	Fore-End Latch Pivot/Stop Pin (2)	59	Sear Pivot Pin
30	Fore-End Latch Spring	60	Sear Spring (2)
31	Fore-End Latch Plate	61	Sear Spring Plunger (2)
31a	Fore-End Latch Plate Screw (2)		

View No.	Part Name	Part No.	Part Name
62	Selector Block		Accessories
63	Selector Block Pin (2)	94528	Choice Tube Wrench
64	Selector Block Pin Retaining		Choice Tubes - Full, Imp. Cyl. & Mod.
65	Stock Assembly (Field)		Additional Choice Tubes Available
71	Stock Bolt		
72	Stock Bolt Lock Washer	102915	Trap Full
74	Stock Bolt Washer	102918	Trap Extra Full
75	Top Lever	102917	Trap Super Full
76	Top Lever Adjusting Screw (2)	100890	Full
77	Top Lever Detent	100891	Imp. Cyl.
78	Top Lever Detent Plunger	100892	Mod.
79	Top Lever Detent Spring	100893	Imp. Mod.
80	Top Lever Spring - Inner	100894	Sheet
81	Top Lever Spring - Outer	85536	Imp. Sheet
82	Top Lever Spring Plunger	84801	Filled
83	Trigger		NOTE: This firearm must be returned to the factory or a
84	Trigger Connector Spring		Remington Authorized Gunsmith to assure proper fit of
85	Trigger Connector Spring Pin		restricted parts.
86	Trigger Guard		
87	Trigger Guard Pin		
88	Trigger Pivot Pin		
89	Trigger Screw		
90	Trigger Screw Nut		

 

®

Remington is a trademark registered in the United States Patent
and Trademark Office by Remington Arms Company, Inc.

Printed in U.S.A.

Form RD 7051
Orig. 300